

Firmware Upgrade through TFTP

Download and install a free TFTP or HTTP server to the LAN to perform firmware upgrades. A free Windows version TFTP server is available:

http://www.solarwinds.com/products/freetools/free_tftp_server.aspx.

DIRECTIONS TO CONFIGURE LOCAL TFTP:

1. Unzip the file and put all of them under the root directory of the TFTP server.
2. The PC running the TFTP server and the Unicorn products should be in the same LAN segment.
3. Go to File -> Configure -> Security to change the TFTP server's default setting from "Receive Only" to "Transmit Only" for the firmware upgrade.
4. Start the TFTP server, in the Unicorn's web configuration page.
5. Configure the Firmware Server Path with the IP address of the PC.
6. Update the change and reboot the unit.